



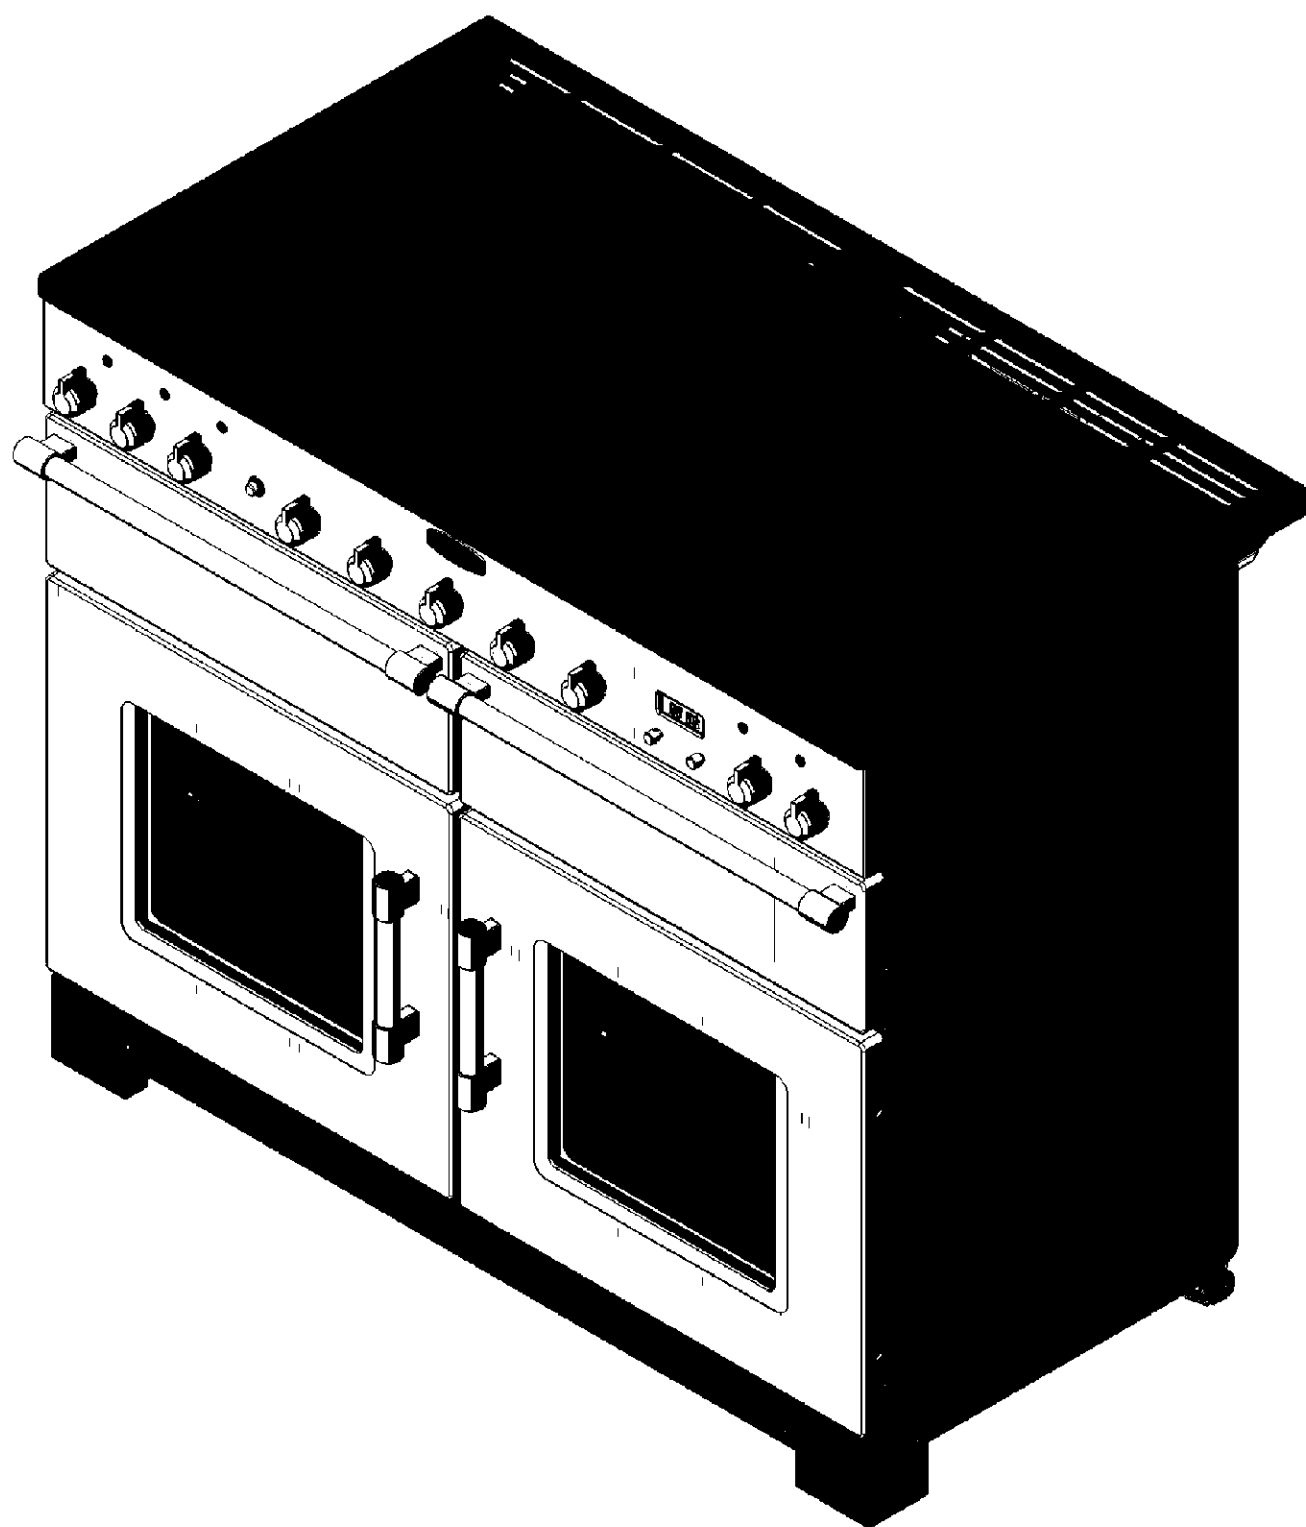


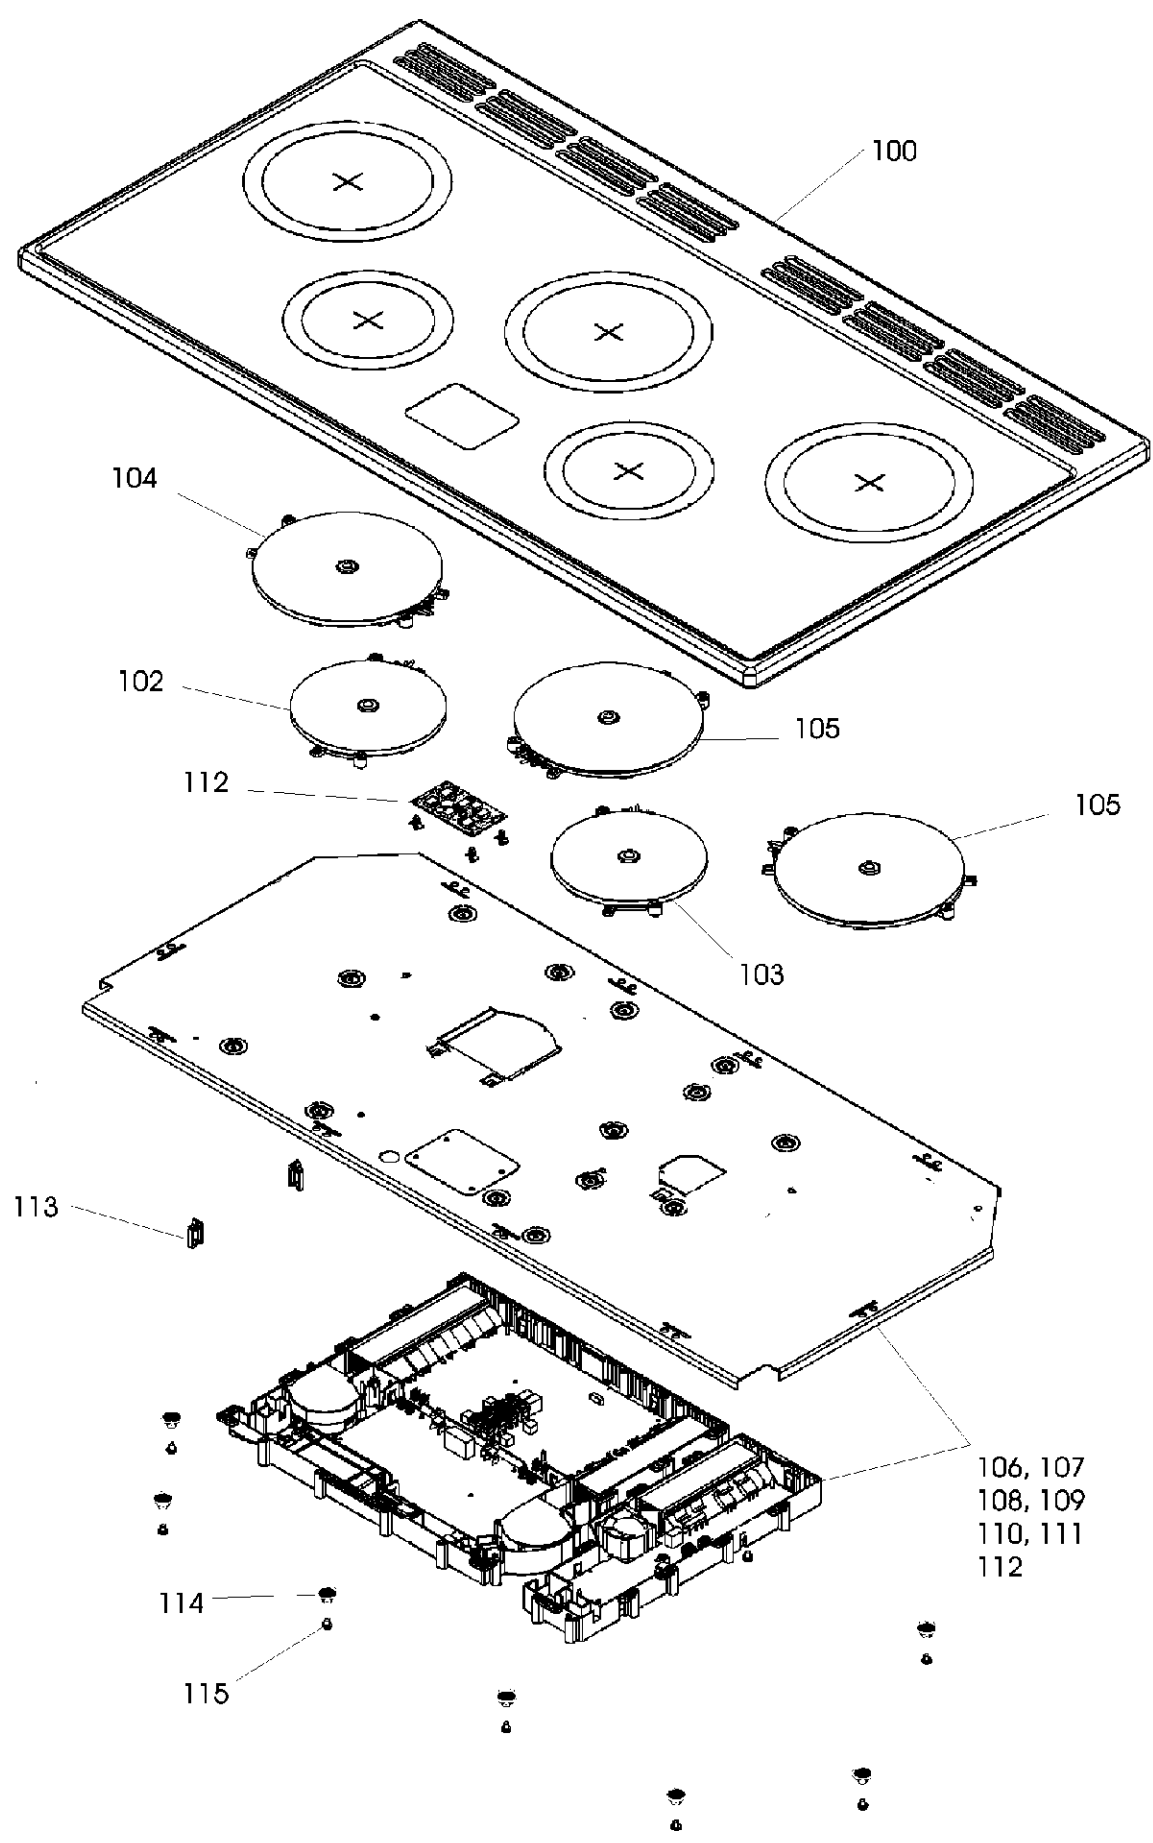

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12


DSL0494 P02
ISSUE STATUS 01

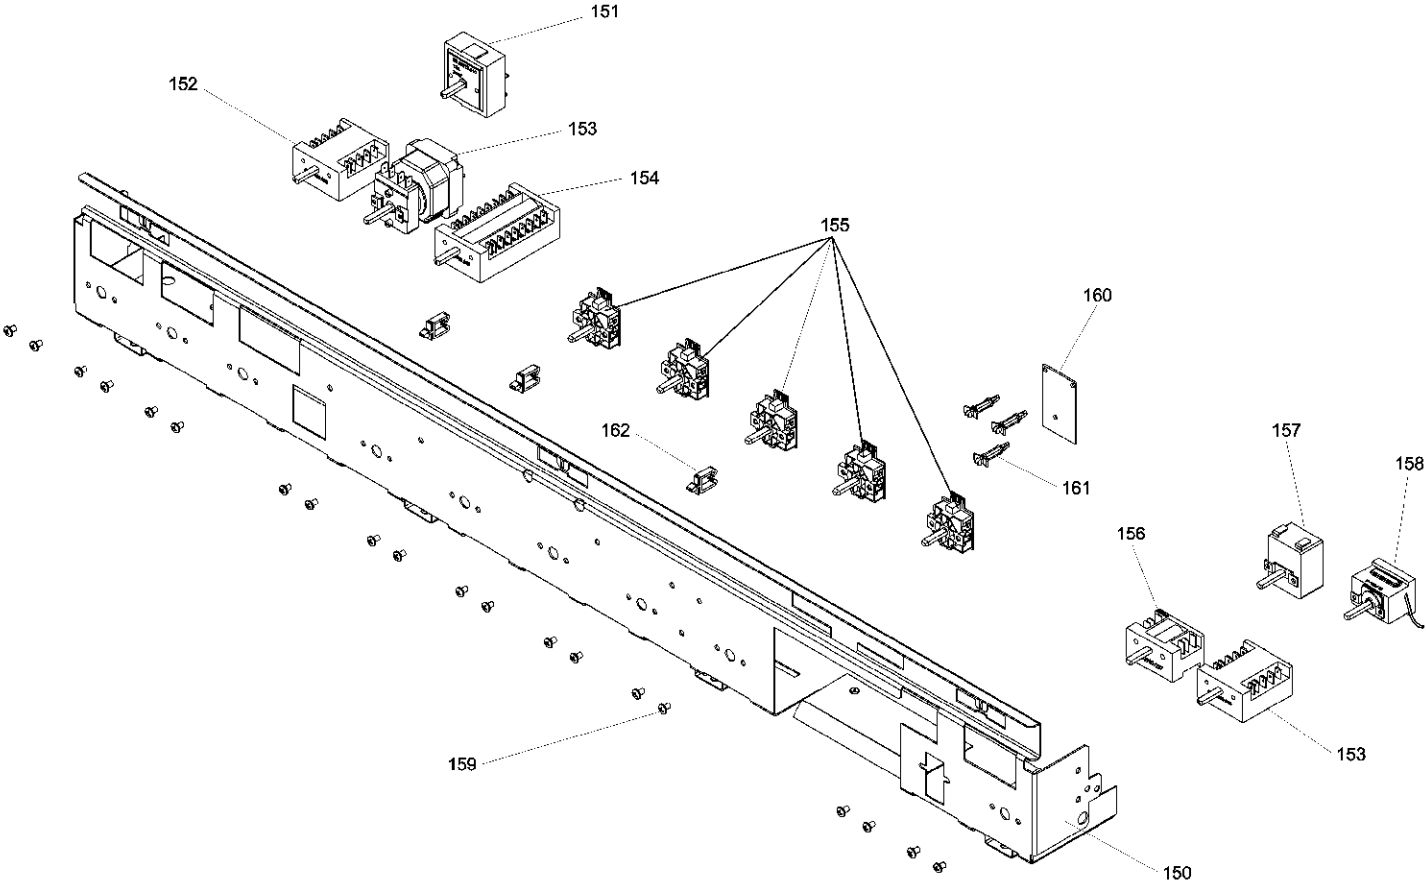

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12


DSL0494 P03
ISSUE STATUS 01

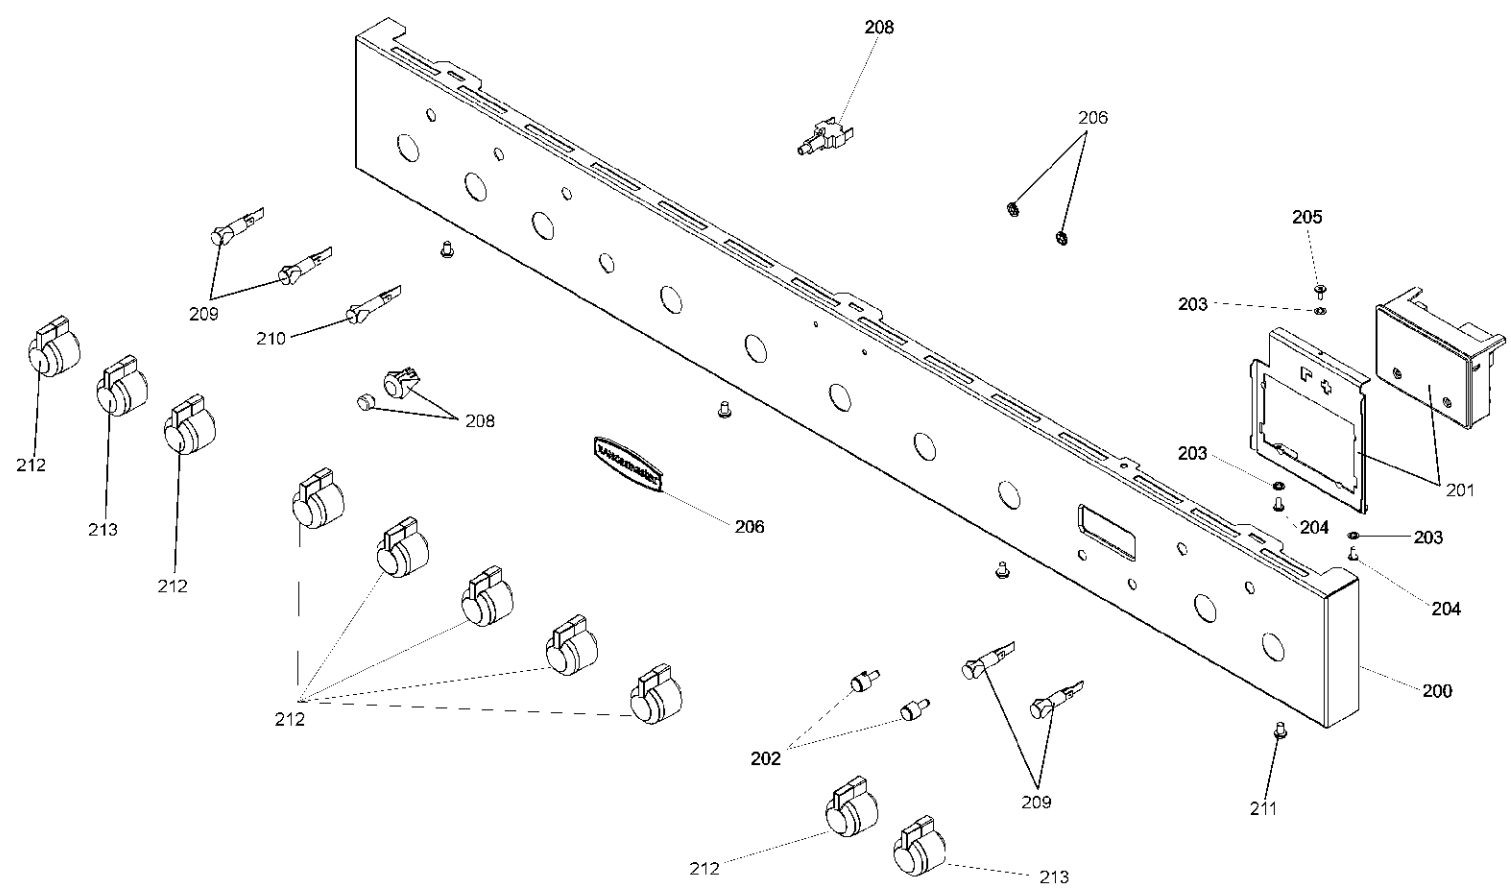

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12


DSL0494 P04
ISSUE STATUS 01

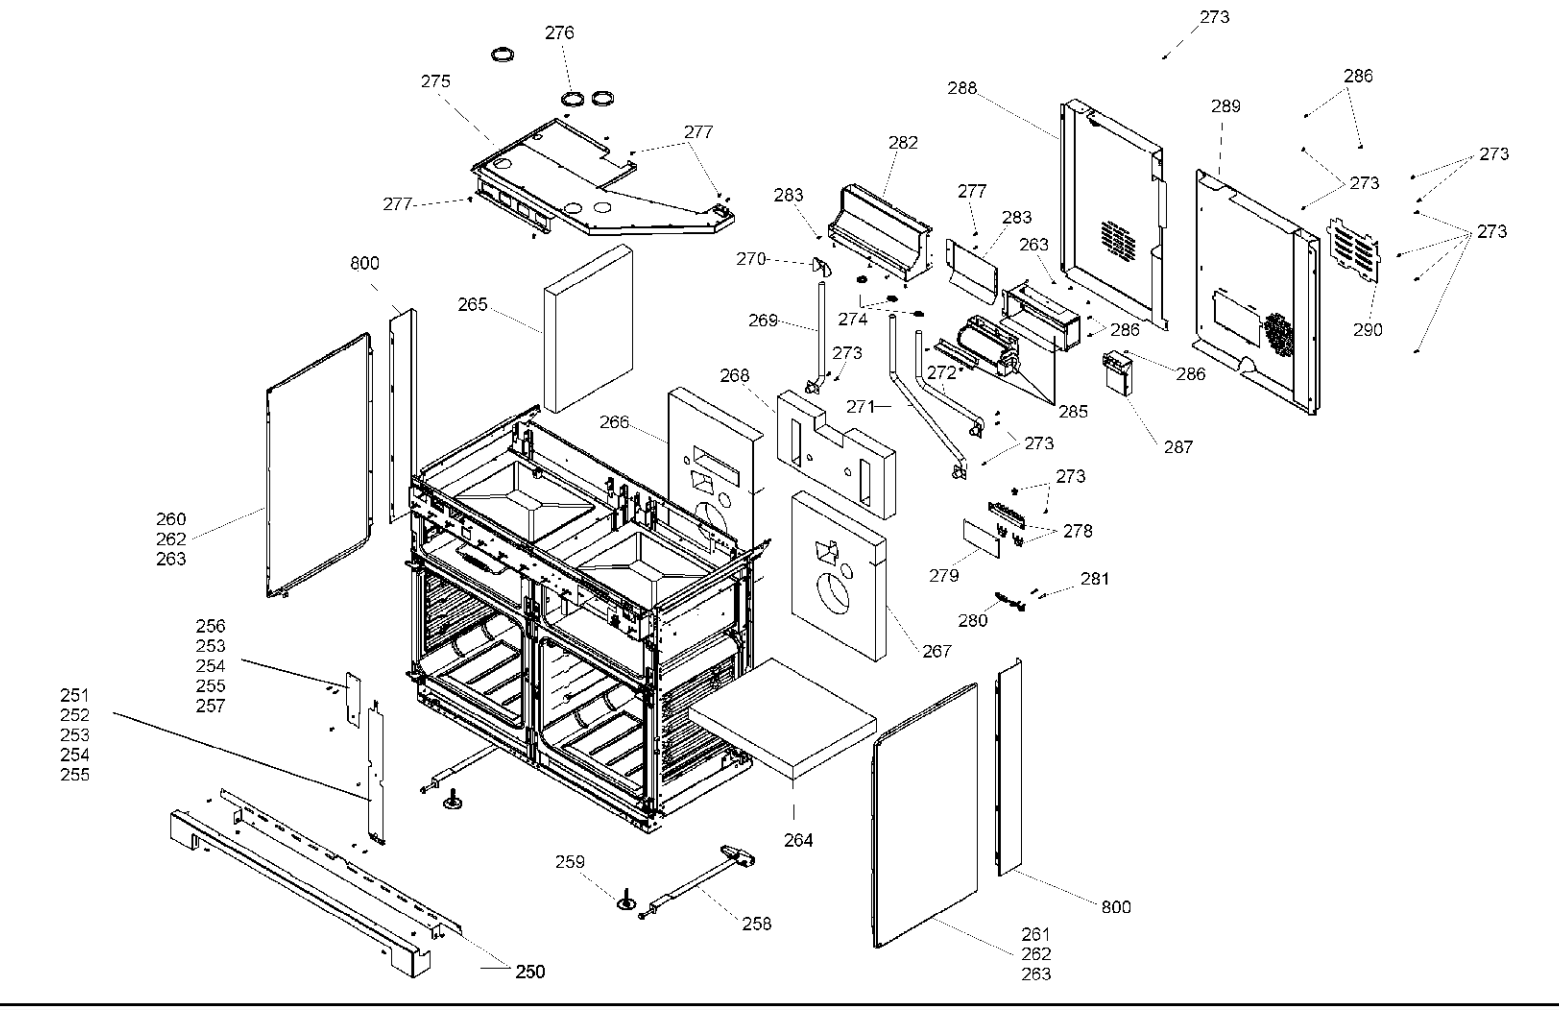


APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12

DSL0494 P05
ISSUE STATUS 01

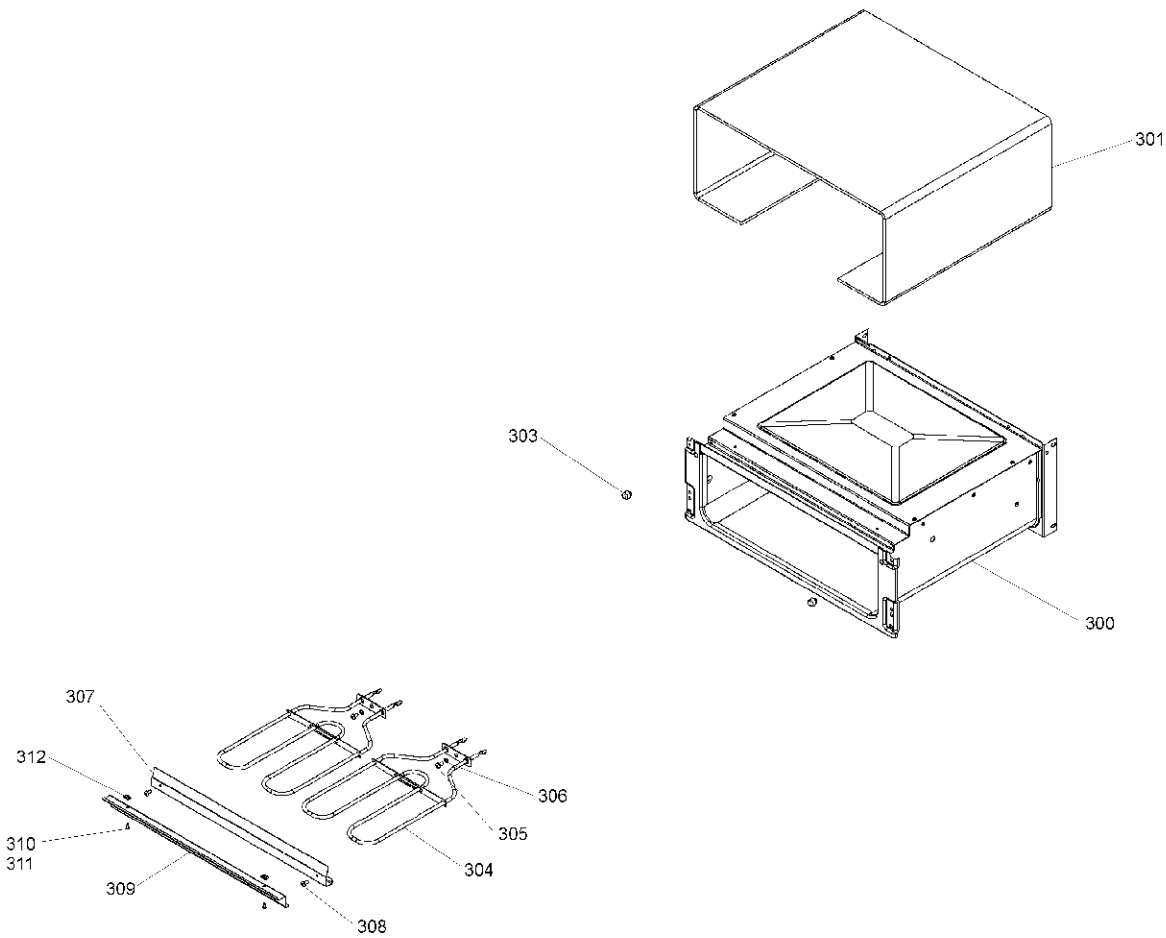


DSL0494 P06
ISSUE STATUS 01

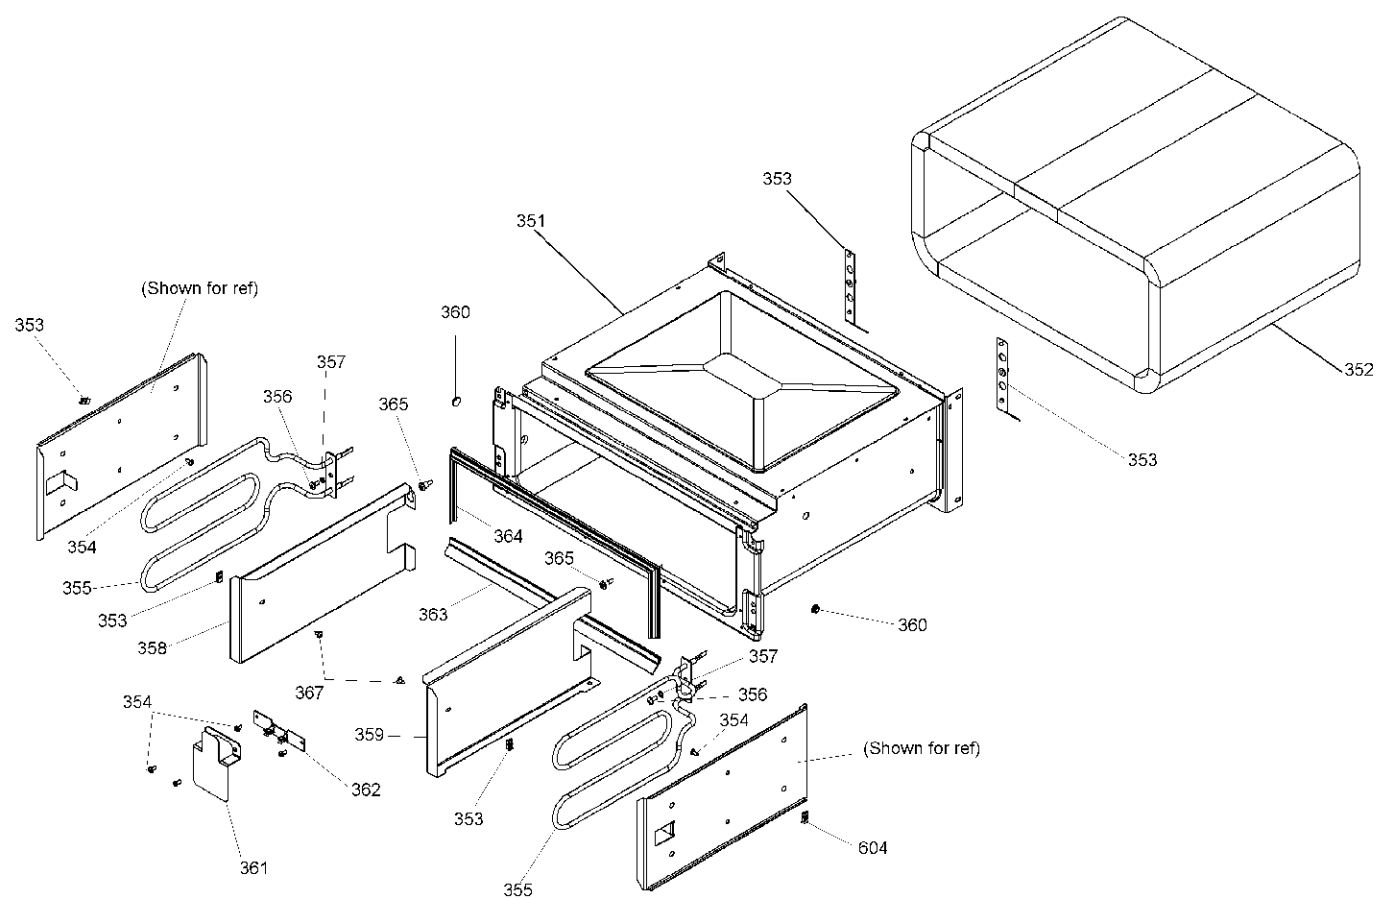

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12


DSL0494 P07
ISSUE STATUS 01

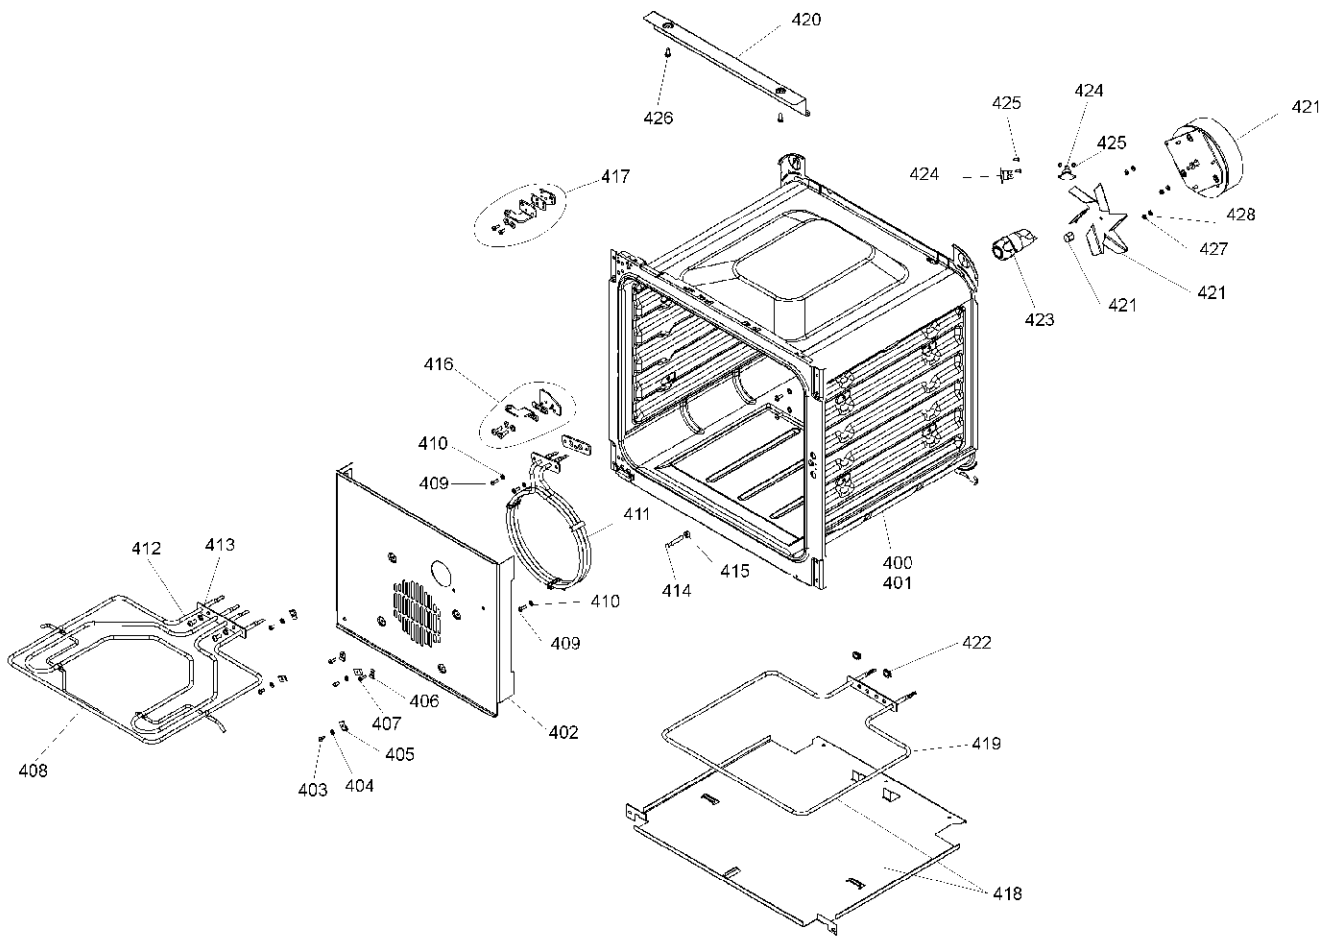

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12


DSL0494 P08
ISSUE STATUS 01

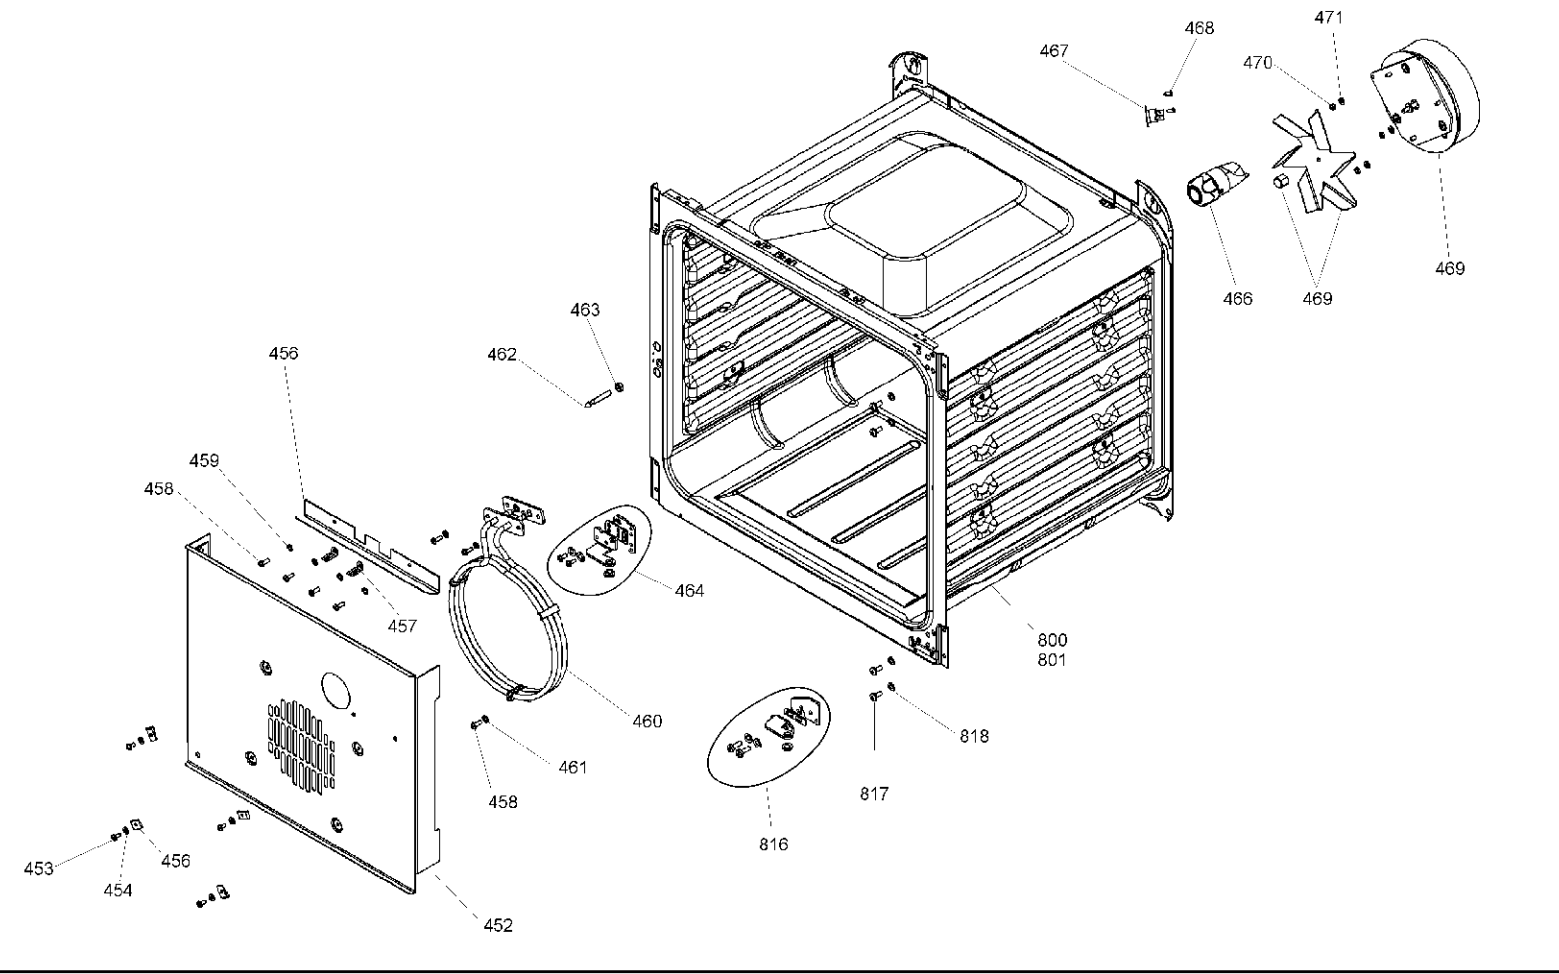

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12


DSL0494 P09
ISSUE STATUS 01

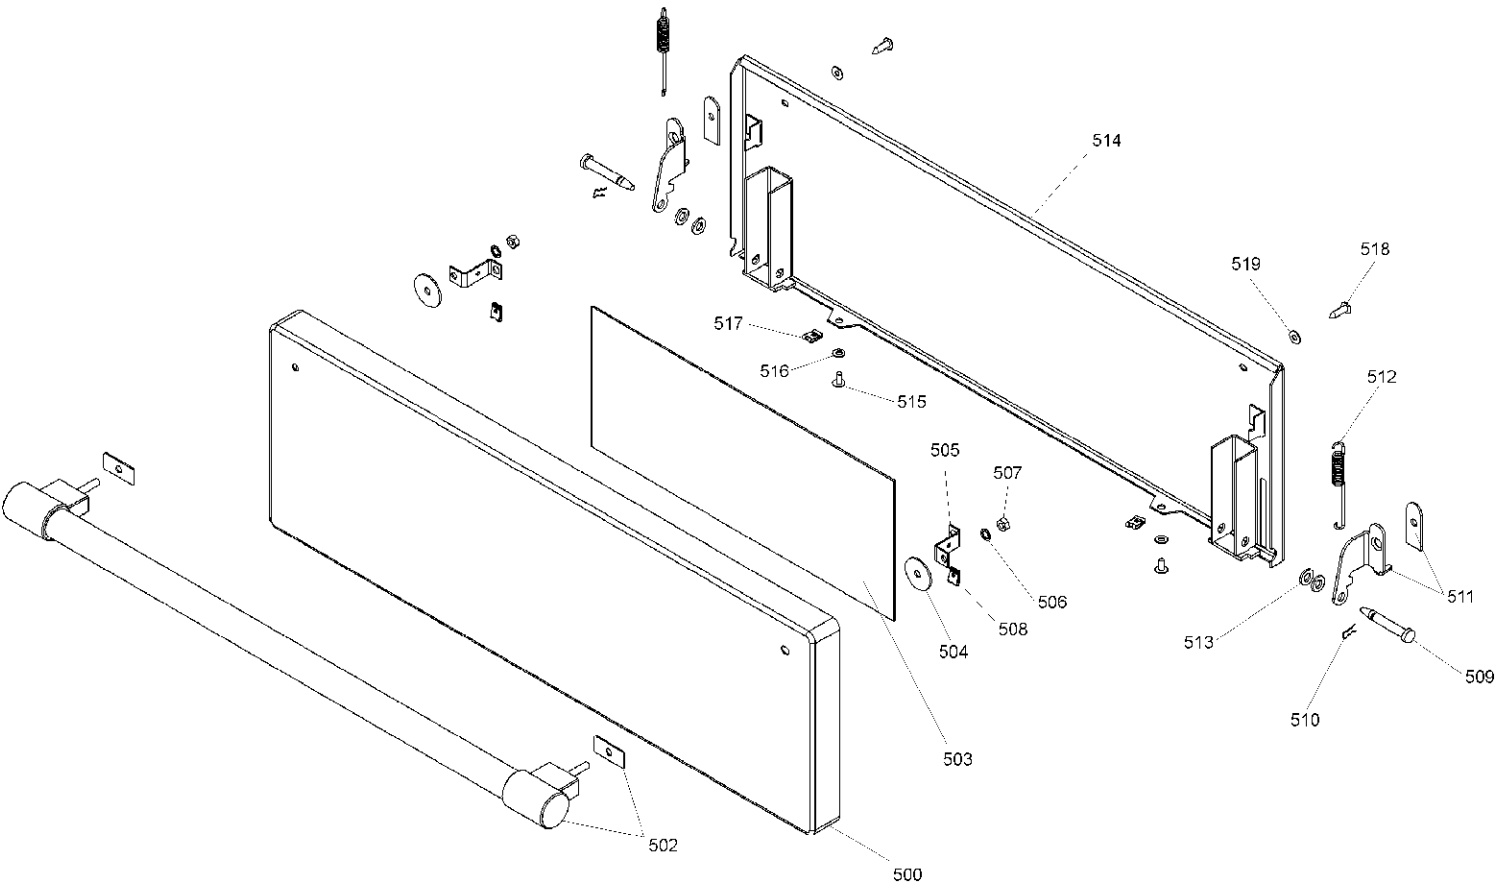

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12

DSL0494 P10
ISSUE STATUS 01

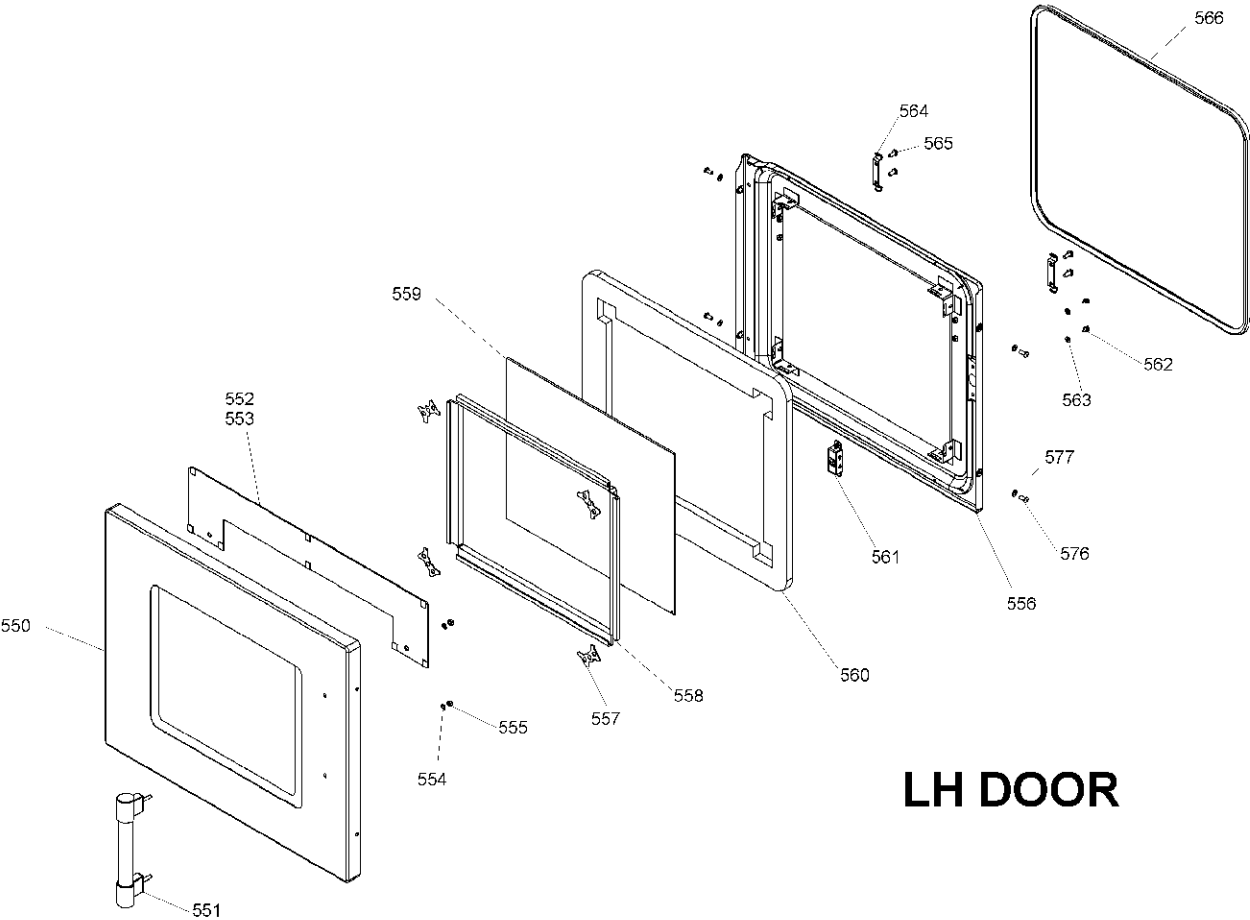


LH DOOR

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12

DSL0494 P11
ISSUE STATUS 01

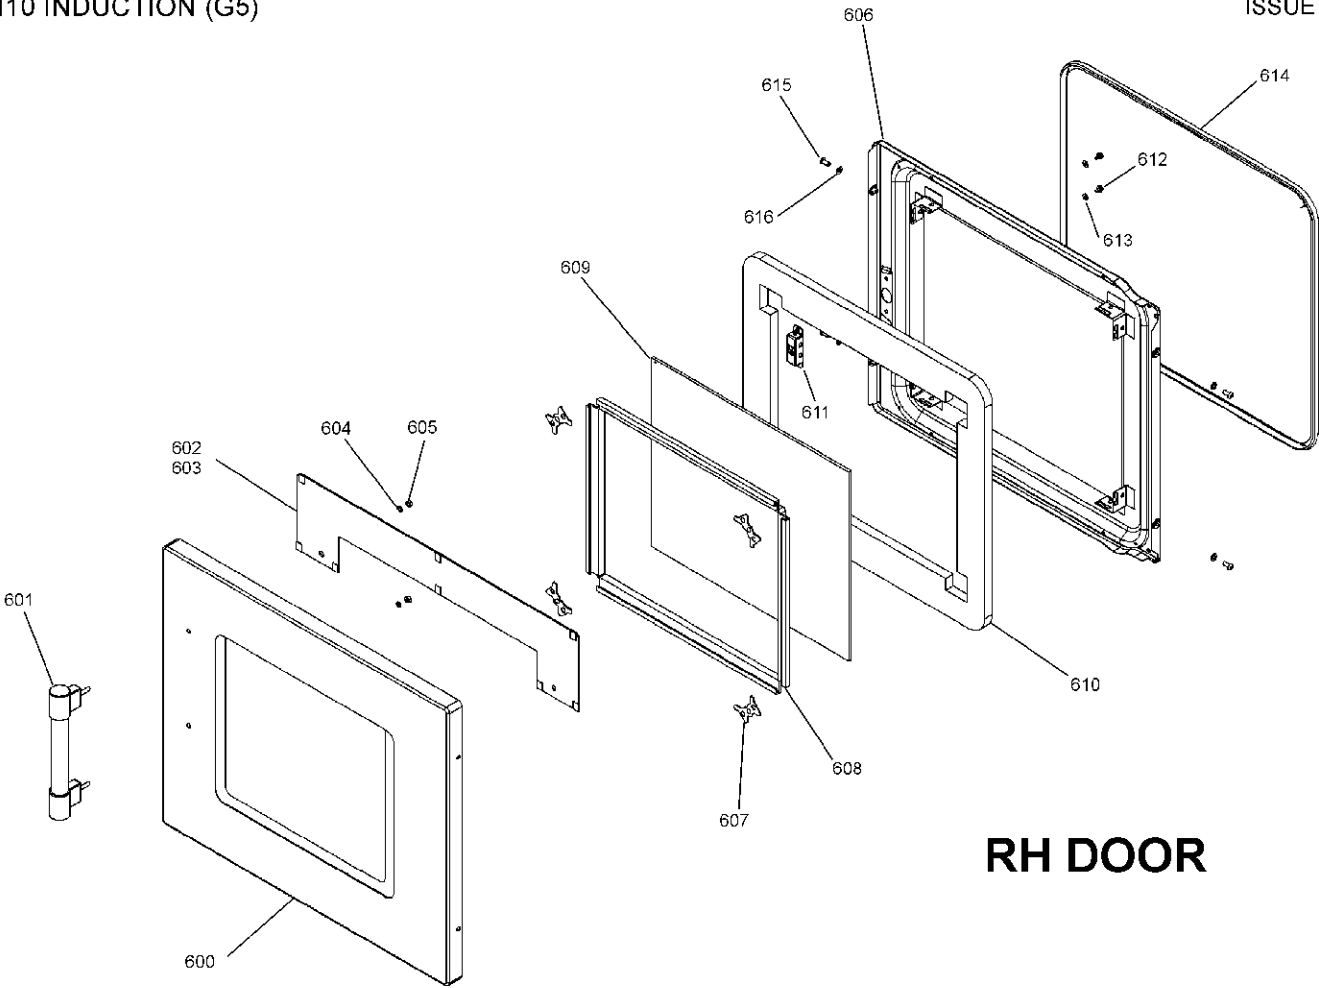



RH DOOR

APPLIANCE NAME:
EXCEL 110 INDUCTION (G5)

DATE 24.02.12

DSL0494 P12
ISSUE STATUS 01

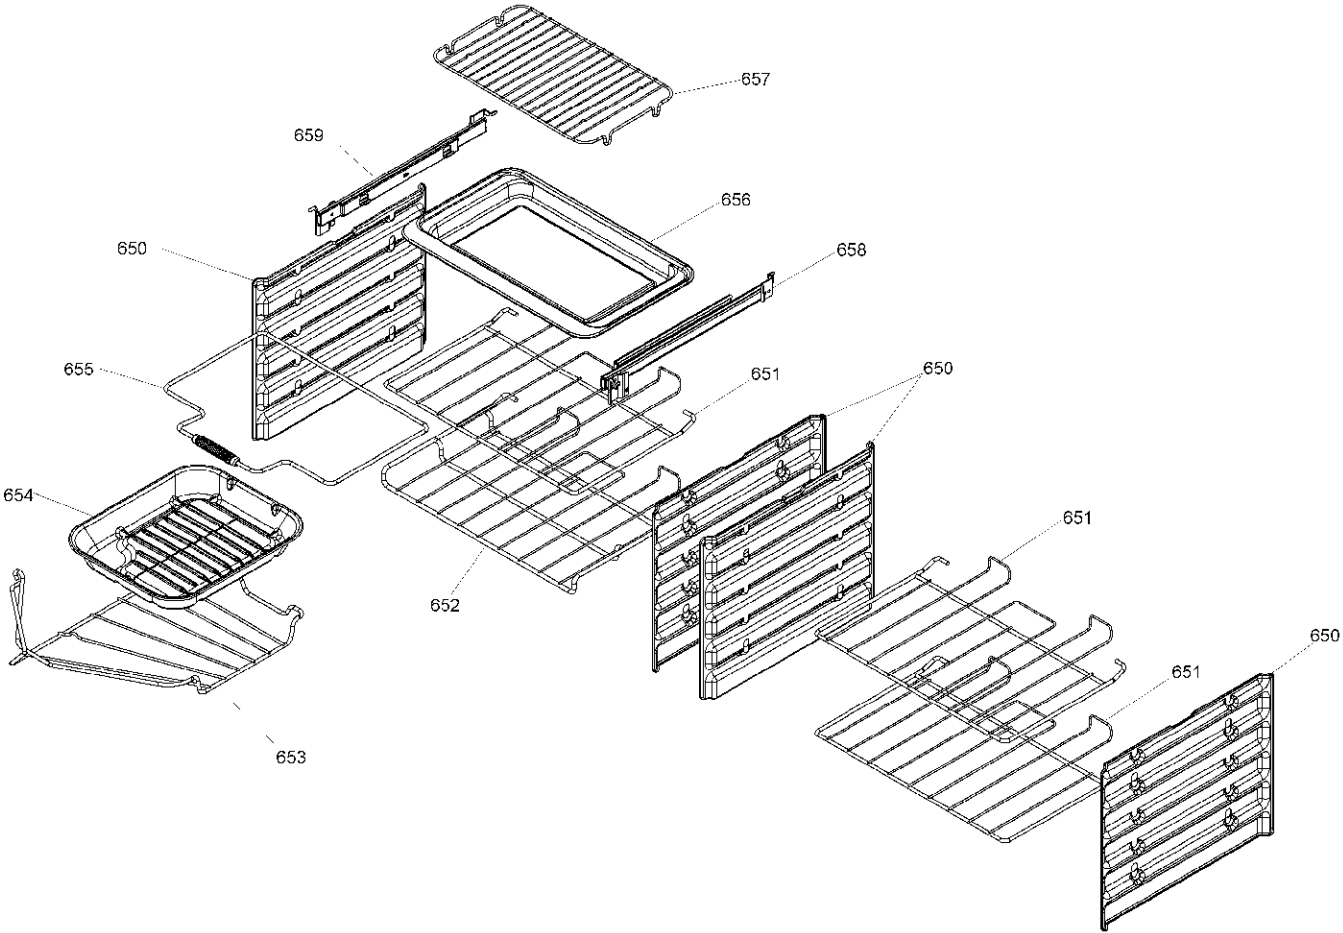

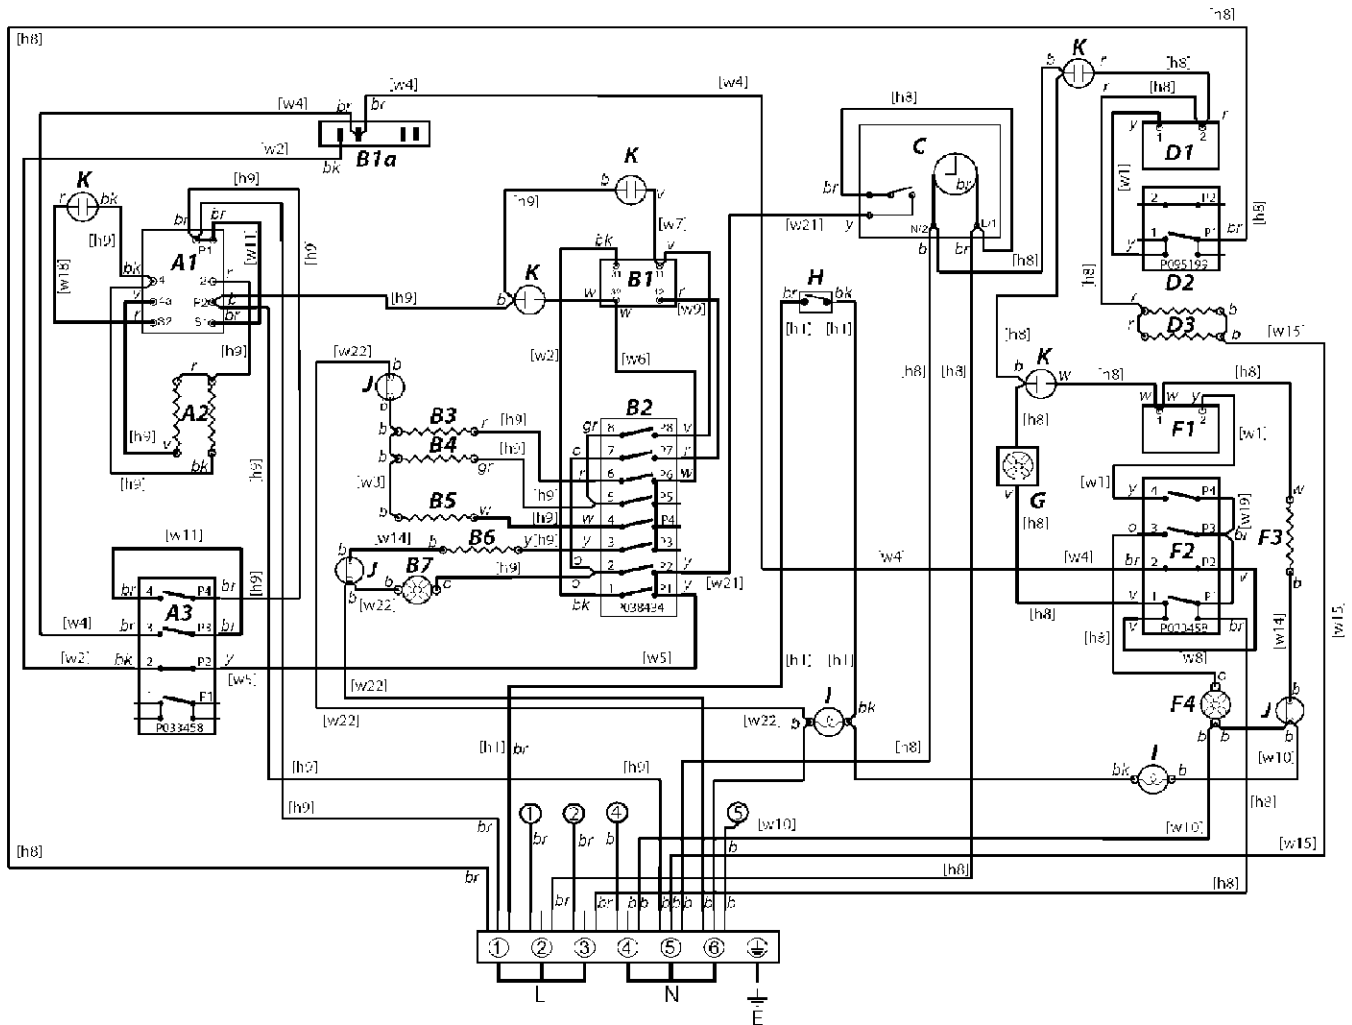

Ref Number	Part number	Colour	Quantity	Remarks
-1	PC40730	br/bk	1	Harness - Light Switch Links
w1	PC37853	y	2	Wire - RH Switch Links
w2	PC36136	bk	2	Wire - Link MF Switch to Stat + Grill Switch to Bottom Stat Front Switch
w3	PC40634	b	1	Wire - LH Top Element Oven Neutral Link + Bottom Element
w4	PC40715	br	1	Wire - Fan Control Link between front switches
w5	PC37428	y	1	Wire - Grill Switch to MF Switch Fan Link
w6	PC36655	w	1	Wire - MF NEON TSTAT SWITCH Link
w7	PC36696	v	1	Wire - MF Oven Neon Link
w8	PC33030	v	1	Wire - RH Stat Front Switch Link
w9	PC84961	r	1	Wire - Rapid Heat Stat to MF Link
w10	PC25925	b	1	Wire - RH Oven Neutral Link
w11	PC56344	br	2	Wire - Grill Energy Reg Link
w12	PC56374	g	2	Wire - (ND) Grill Earth Link
w13	PC36677	g	1	Wire - (ND) Earth Link to Oven
w14	PC40030	b	2	Wire - Ind to Elements Neutral Links
w15	PC40044	b	1	Wire - Warning Oven Neutral Link
w16	PC36611	g	1	Wire - (ND) RH Oven and Warner Oven Earth
w17	PC91640	g	2	Wire - (ND) RH Oven stat Earth Link
w18	PC40719	r	1	Wire - LH Oven neon Link
w19	PC40718	br	1	Wire - RH Oven Live Link
-2	IC51829	br/b/g	1	Harness - MAINS POWER - CONNECTOR BLOCK - INDUCTION UNIT
-3	P057349	br/b/g	1	Harness - MAINS POWER - TERMINAL BLOCK - CONNECTOR BLOCK
w20	PC52071	g	1	Wire - (ND) Hot Protective earth to Glass
-4	PC43629	br	3	Harness - Relay Control 1, 2 and 3
-5	PC43637	br	1	Harness - Relay Control 3
-6	PC43636	br	1	Harness - Relay Control 4
-7	IC51176	br	1	Harness - LIN Connection K6 to Interface Board
-8	PC52631	br/bk/or/w	1	Harness - RH Oven + Slow Cook Harness + Fan Control
w21	PC46622	y	1	Wire - LH Oven MF to Grill Link
-9	PC52639	br/bk/or/w/y/gw/bk	1	Harness - LH Oven + Grill Control
w22	PC36011	b	2	Wire - MF Top Elements and Light Neutral + LH Oven Fan Oven Trio and Fan Feed

Code	Colour
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green/Yellow
gr	Grey

Code	Description
D1	Slow cook oven thermostat
D2	Slow cook oven switch block
D3	Slow cook oven elements
F1	Right-hand oven thermostat
F2	Right-hand oven switch block
F3	Right-hand fan oven element
F4	Right-hand oven fan
G	Cooling fan
H	Oven light switch
I	Oven light
J	Therma cut-out
K	Neon

Code	Description
A1	Grill energy regulator
A2	Grill elements
A3	Grill front switch
B1	Left-hand multi-function oven thermostat
B1a	Left-hand multi-function oven thermostat front switch
B2	Multi-function oven control
B3	Multi-function oven base element
B4	Multi-function oven top element (outer pr.)
B5	Multi-function oven top element (inner pr.)
B6	Multi-function oven fan element
B7	Multi-function oven fan
C	Clock

Nil Not Labeled

w - Single Cable / Single Cable with multiple terminations

r - Harness Assembly (including Single Wires that are Smeared)