

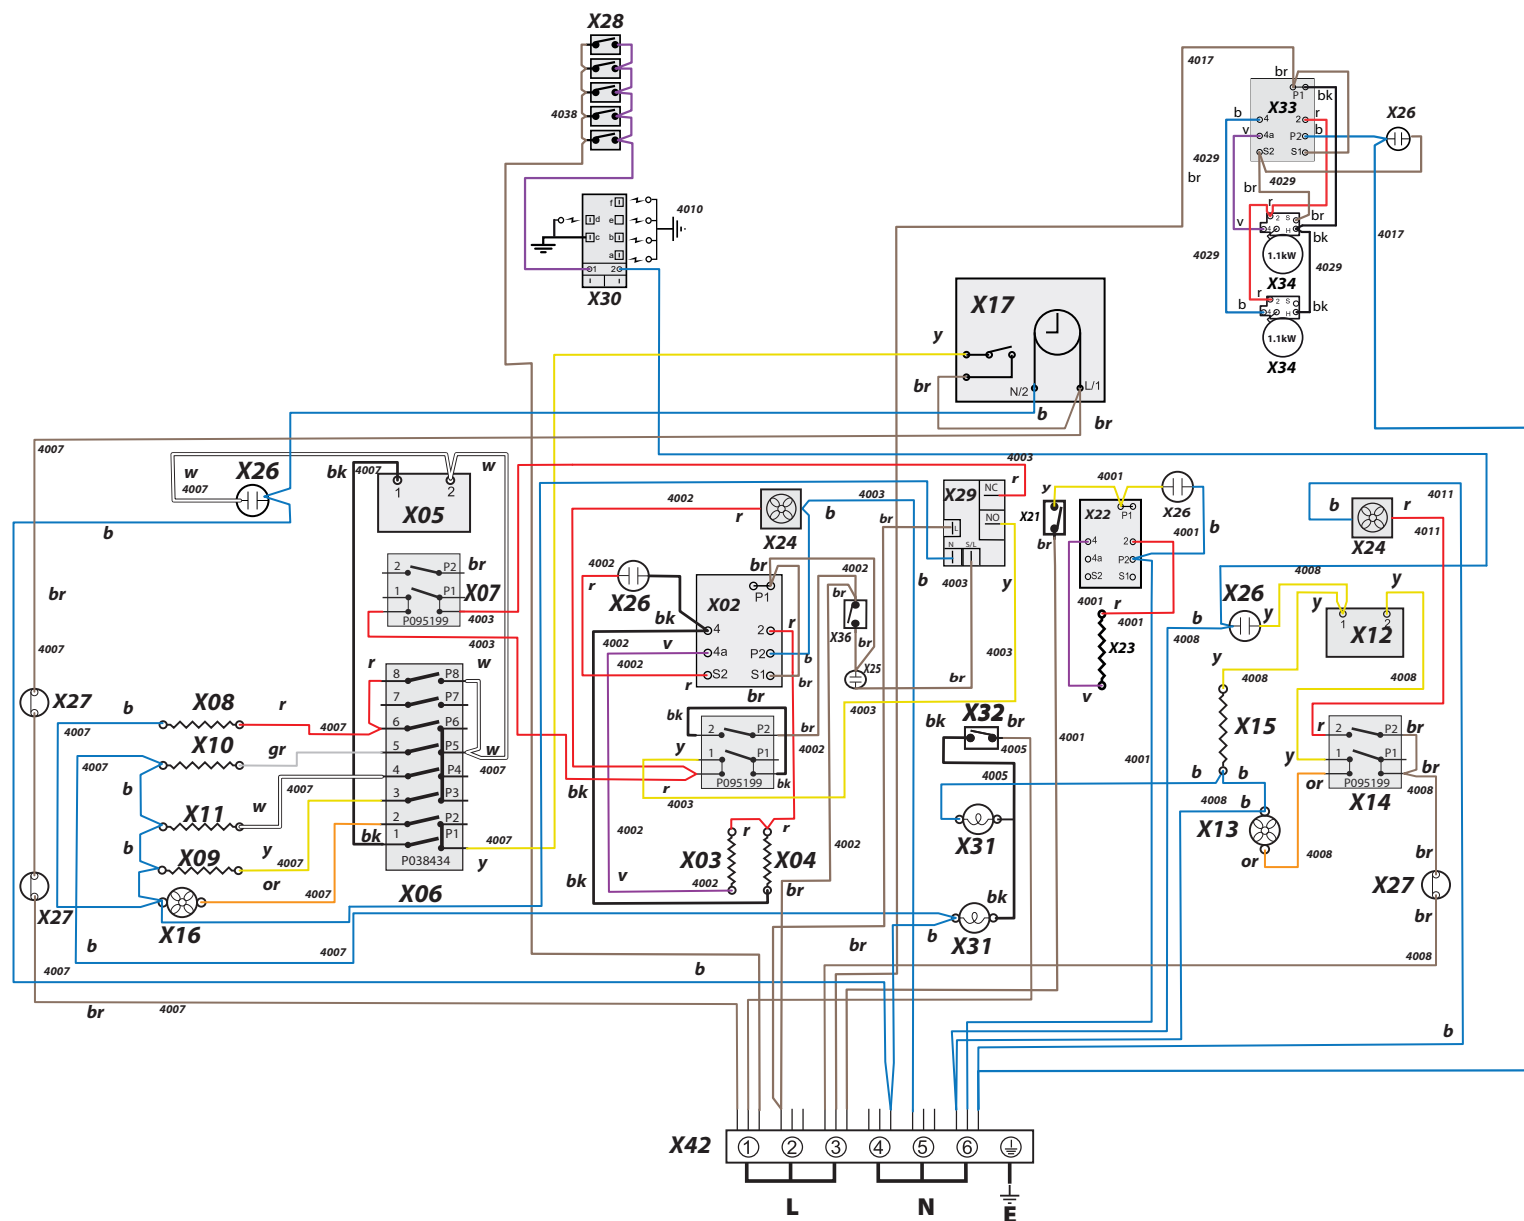


Diagram Code	Diagram Description
X01	Grill Front Switch
X02	Grill Energy Regulator
X03	Left Hand Grill Element
X04	Right Hand Grill Element
X05	Left Hand Oven Thermostat
X06	Left Hand Oven Multifunction Switch
X07	Left Hand Oven Thermostat Front Switch
X08	Left Hand Oven Base Element
X09	Left Hand Oven Fan Element
X10	Left Hand Oven Top Outer Element
X11	Left Hand Oven Top Inner Element
X12	Right Hand Oven Thermostat
X13	Right oven Fan
X14	Right Hand Oven Front Switch
X15	Right Hand Oven Fan Element
X16	Oven Fan
X17	Clock / Timer
X21	Proving Drawer Switch
X22	Proving Drawer Energy Regulator
X23	Proving Drawer Element
X24	Cooling Fan
X25	Cooling Fan Cut In
X26	Neon
X27	Thermal Cut Out
X28	Ignition Switches
X29	Cooling Fan Relay
X30	Spark Generator
X31	Oven Light
X32	Oven Light Switch
X36	Grill Door Cut-off Switch
X42	Terminal Connection

Code	Colour
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
gr	Grey

DISCLAIMER : THE IMAGES SHOWN ARE FOR ILLUSTRATION PURPOSES ONLY, AND MAY NOT BE AN EXACT REPRESENTATION OF THE PRODUCT.